
























 
 























LightSYS Plus

 
Quick User Guide

Full Setting	
 <ul style="list-style-type: none"> ❖ Quick mode:  ❖ High Security mode: Code ➤  	 <ul style="list-style-type: none"> ❖ Quick mode:  ❖ High security mode:  <ul style="list-style-type: none"> ➤ code or use Proximity tag
 <ul style="list-style-type: none"> ❖ Quick mode:  ❖ High Security mode: Code ➤  	 <p> to apply to all partitions, or slide a specific partition to the right under .</p>
 <ul style="list-style-type: none"> ❖ Quick mode:  . ❖ High security mode: Code ➤  	 <p>Press </p>
 <p>Full Set all: Security ➤ </p>	 <p>Press </p>
 <ul style="list-style-type: none"> ❖ Quick mode:  ❖ High Security mode:  ➤ code 	

Part Setting	
<div></div> <div><div>❖ Quick mode: </div><div>❖ High Security mode: Code ➤ </div></div>	<div></div> <div><div>❖ Quick mode: </div><div>❖ High security mode:  ➤ code or use Proximity tag</div></div>
<div></div> <div><div>❖ Quick mode: </div><div>❖ High Security mode: Code ➤ </div></div>	<div></div> <div><div> to apply to all partitions, or slide a specific partition to the left under </div></div>
<div></div> <div><div>❖ Quick mode: </div><div>❖ High security mode: Code ➤ </div></div>	<div></div> <div>Press </div>
<div></div> <div>Part Set all: Security ➤ press </div>	<div></div> <div>Press  or large rounded button (installer-defined)</div>
<div></div> <div><div>❖ Quick mode: </div><div>❖ High Security mode:  ➤ code</div></div>	


Partition & Group Setting

❖ Full partition setting:

Code > "Security" menu > "Partitions" tab > select All or specific partition number/s > 



❖ Part partition setting:

Code > "Security" menu > "Partitions" tab > select All or specific partition number/s > 

Group setting: "Groups" tab > press group letter

❖ Full partition setting:

Code >  > select All or specific partition number/s > 



❖ Part partition setting:

Code >  > select All or specific partition number/s > 


Group setting: Press group letter

❖ Full partition setting:

Code >  > select All or specific partition number/s > 



❖ Part partition setting:

Code >  > select All or specific partition number/s > 

Group setting: Press group letter



Note: Supports up to 3 partitions. Does not support Group setting.

❖ Full partition setting:

- Quick mode: Partition number > 
- High Security mode: Partition number >  > code or use Proximity tag



❖ Part partition setting:

- Quick mode: Partition number > 
- High Security mode: Partition number >  > code or use Proximity tag

System Unsetting



Code ➤ “Security” menu ➤



➤ code or use Proximity tag



Code ➤



to unset all partitions, or slide a specific partition to the center under



➤ enter code



Code ➤



Press



Unset all: Security ➤



➤ code ➤

press Unset



Unset all: Press



❖ Quick mode:



❖ High security mode:



➤ code

Partition & Group Unsetting



Code ➤ “Security” menu ➤ “Partitions” tab ➤ select the Partitions to Unset



Partition unsetting: Code ➤



➤ select All or specific partition number(s)



Partition unsetting: Partition number ➤



➤ code



Partition unsetting: Code ➤



➤ select All or specific partition number(s)

Duress Unsetting



Duress code ➤

Note: Panel is silent (no alarm sounder)



➤ duress code

Note: Panel is silent
(no alarm sounder)



Duress code ➤

Note: Panel is silent (no alarm sounder)

Omitting & Un-omitting Zones



Code ➤ “Security” menu ➤ “Detectors” tab ➤ select a detector (zone) ➤ slide switch to the right to omit



➤ code ✓ ➤ scroll to Activities menu ✓ ➤ Omit ✓ ➤ Zones ✓ ➤ scroll to select a omit option ✓ .



➤ code ➤ scroll to Activities menu ➤ Omit ➤ Zones ➤ scroll to select a omit option

Viewing System Faults



Code ➤ from the Top Bar, press to view faults



➤ code ✓ ➤ scroll to View menu ✓ ➤ Fault ✓ ➤ scroll to view faults



➤ code ➤ scroll to View menu ➤ Fault ➤ scroll to view faults

Viewing Last Alarm / Event Log



Code ➤ “History” menu ➤ press “All” to view all events, or search an event

Note: You can filter the search according to specific types of events:

All / Alarms / Faults / Smart Home / Media Events



📄 ➤ code ✓ ➤ scroll to Event Log ✓ ➤ scroll to view events



 
⚙️ ➤ code  ➤ scroll to Event Log  ➤ scroll to view events


Viewing System Status



i for 2 seconds



❖ Quick mode:  for 2 seconds

❖ High Security mode:  for 2 seconds ➤ code or use Proximity tag

 



Press  



Press 



❖ Quick mode:  for 2 seconds

❖ High Security mode:  for 2 seconds ➤ code

Activating Output



Code ➤
"Security" menu
➤
"Utility Output"
tab ➤ select
relevant Utility
Output button,
✓



➤ code ✓ ➤
scroll to
Activities menu,
✓ ➤ scroll to
Utility Output
menu ➤ enter
Utility Output
number ✓.
Note: Must be
installer-defined



❖ Quick mode: Press
button (1—3) for 2
seconds
❖ High security
mode: Press
button (1—3) for 2
seconds ➤ code or
use Proximity tag.
Note: Must be
installer-defined



⚙️ ➤ code OK ➤ scroll to Activities menu, OK ➤ scroll to Utility Output
menu ➤ enter Utility Output number OK.
Note: Must be installer-defined





❖ Quick mode: Press button (1—3) for 2 seconds
❖ High security mode: Press button (1—3) for 2 seconds ➤ enter code.
Note: Must be installer-defined

Activating a Panic Alarm

 



Press the Emergency button  (located at the top of the Lock Screen or at
the end of the main menu) ➤  ➤ press  and  and hold together
for 2 seconds.





Press  and  and hold together for at
least 2 seconds




Press  and 
and hold together for
2 seconds



Press  and  and hold together for at least 2 seconds



Press  and  and hold simultaneously



Press  and  and hold together for 2 seconds.

Activating a Fire Alarm



Press the Emergency button  (located at the top of the Lock Screen or at the end of the main menu) ➤  ➤ press  and  and hold together for 2 seconds.



Press **4** and **5** and hold together for at least 2 seconds.







Press **3** + **4** and hold together for 2 seconds



Press **4** and **6** and hold together for at least 2 seconds

Activating an Auxiliary Emergency Alarm



Press the Emergency button  (located at the top of the Lock Screen or at the end of the main menu) ➤  ➤ press  and  and hold together for 2 seconds.



Press **7** and **8** and hold together for at least 2 seconds.



Press **5** + **6** and hold together for 2 seconds



Press **7** and **9** and hold together for at least 2 seconds.

SMS Commands

NOTES: Command words are not case sensitive. A separator between command words may be used (or not). To receive an acknowledgement reply, add **RP** to the end of an SMS command.

Full Set: code + S (Example: 1234S)

Get system status: code + ST

Part Set: code + P

Omit Zone: code + O + zone number

Group Set: code + G + select group A--D

Un-omit Zone: code + UO + zone number

Full Unset: code + US

View last alarm : code + AL

Partition Full Set: code + S + partition number

Change FM number: code + FMPHONE + FM serial number + NEW + new phone number

Partition Part Set: code + P + partition number

Multiple Partition Full/Part Set: code + S/P: + partition number A, + partition number B, + partition number C, etc.

Activate Output: code + POON + PO number

Partition Unset: code + US + partition number

Deactivate Output: code + POOFF + PO number

Multiple Partition Unset: code + US + partition number A, + partition number B, + partition number C, etc.

Get SIM credit level: code + CR

Icons – Elegant Keypad



Power

On: Power OK.

Off: No power

Rapid flash: System fault.

Slow flash: System is programming



Ready

On: Ready to set

Off: Not ready to set

Slow flash: Ready to set while entry/exit zone is open



Set

On: System in full set mode

Off: System unset

Rapid flash: Alarm

Slow flash: System in Exit Delay



Part Set / Omitted

On: System in part set or zone-omitted mode

Off: No omitted zones



Tamper

On: Tamper alarm

Off: No tamper alarm



Fire

On: Fire alarm

Off: No fire alarm




Flash: Fire circuit fault

LED Indicators – 2-Way Remote Control







Operation	Send command*	Receive Status
Full Set	Green	Red
Part Set	Green	Orange
Unset	Green	Green
Alarm	Green	Flashing LED

* If the LED changes to orange, it indicates a low battery condition.

Defining User Codes – Elegant Keypad

1.  ➤ Grand master code (default = 1234) ✓
2.  to scroll to **Codes/Tags** ➤ press ✓ twice.
3.  to scroll to the user (index number) for defining ➤ press ✓ twice.
4. Enter (or re-enter) a 4–6 digit code ✓ ; the system beeps and ACCEPTED displays

Defining User Codes – Panda Keypad

1.  ➤ Grand master code (default = 1234) ✓
1.  to scroll to **Codes/Tags** ➤ press  twice.
2.  to scroll to the user (index number) for defining ➤ press  twice.
3. Enter (or re-enter) a 4–6 digit code  ; the system beeps and ACCEPTED displays

Registering to the RISCO Cloud

Note: Before registering, consult with your Installer to check if you were previously registered:

If you were previously registered:

- a. If you are a RISCO Cloud End-User, accept the invitation sent to your Inbox and then Login to the RISCO Cloud / Web User Application.
- b. If you are not a RISCO Cloud End-User, accept the invitation sent to your Inbox and then follow the instructions to finalize the creation of your account.

If you were not previously registered:

- 1 After the RISCO Cloud has been enabled by your system installer, go to www.riscocloud.com and press **Register**.
- 2 Fill in your **first and last name**.
- 3 Enter your **e-mail address** as the Login Name (required for 1st-time activation).
- 4 Define **password** (minimum of 8 characters, including at least one small case, one upper case and one special character), and then confirm.
- 5 Enter the **15 digits Panel ID** as it appears as printed on the postcard packaged with the main panel. You can also view it on the keypad (see the LightSYS Plus User Manual).
- 6 Complete registration form including Site Name, Time Zone and Equipment ID and then press **Create**.
- 7 To complete the registration procedure, open the e-mail received at the email account you had defined as the Login Name in step 3, and then click the link to activate your registration to the Cloud.

Logging in to the RISCO Cloud / Accessing the Web User Application

- 1 Go to www.riscocloud.com
- 2 Enter your **user name** and **password** (as defined during the registration process).
- 3 Click **Login**.
- 4 Select the Site and then enter the **system PIN code** (user code).
- 5 Click **Login**.

iRISCO Smartphone App

Download the iRISCO Smartphone app from the Apple App store or the Android Play Store.



For additional information see the LightSYS Plus User Manual, available on our website:
www.riscogroup.com/uk

© RISCO Group 2022. All rights reserved.